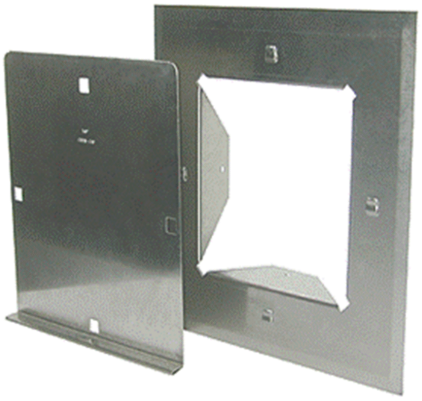

Forever Clean Out Door Installation Instructions

First– Measure the opening of your chimney's clean out opening.

Second– Remove the door from the frame by sliding it up.

Three– Slide the frame into the opening. Adjust the tabs, so the they
fit tightly against the inside sides of the chimney.

Four– Remove the frame from the opening.

Five– Using RTV silicone adhesive chalking. Apply the chalking on both the backside of the frame and the face of the chimney around the opening.

Six- Slide the frame back into the opening. Using duck tape. Tape the frame to the chimney, to hold it in place while it dries. Wait at least 24 hours before removing the tape and reinstalling the door.